


punt

Art, craft & design






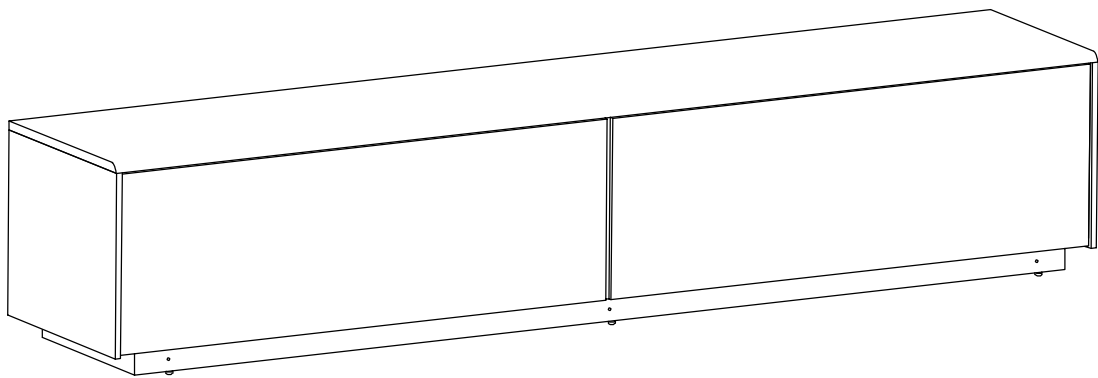


MALMÖ



ASSEMBLY INSTRUCTIONS

FITTINGS MLM 4 MOD / 5 MOD


HERRAJES

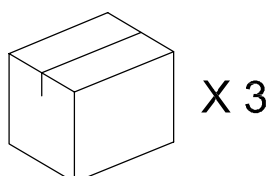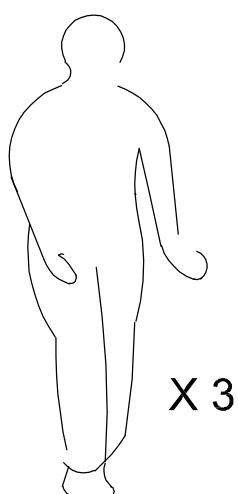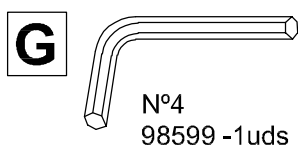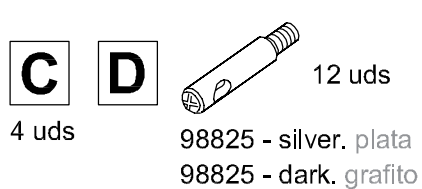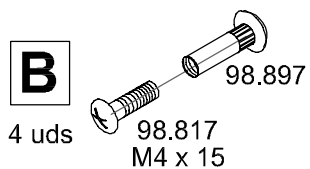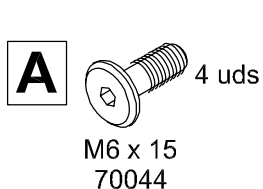

1 SCREW. ATORNILLAR.

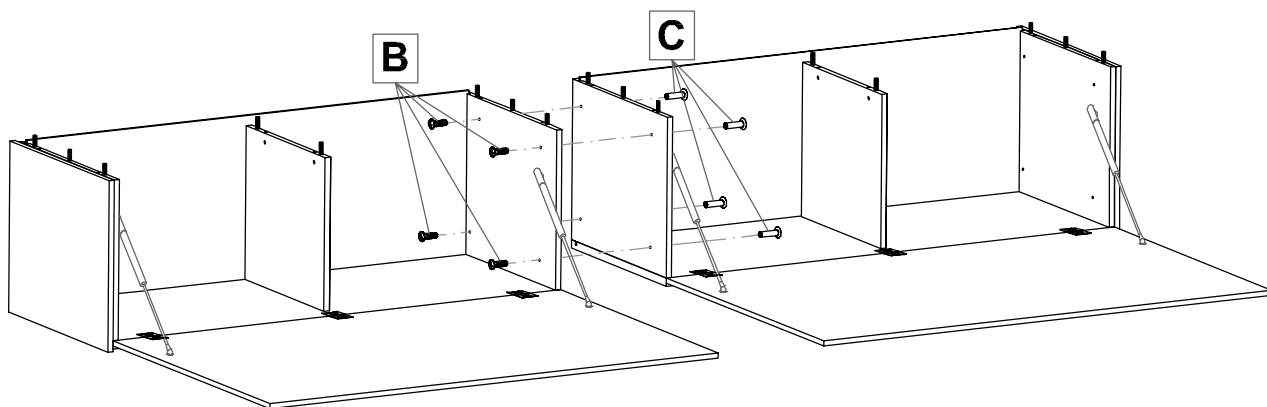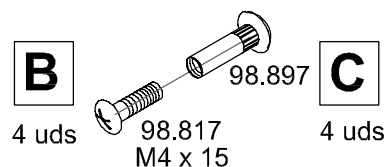


2 SCREW. ATORNILLAR.

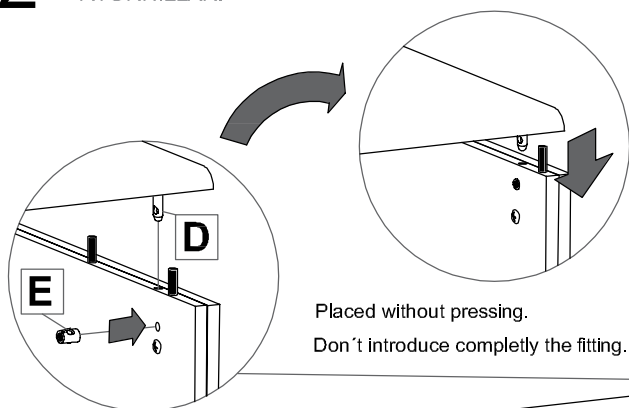




Placed without pressing.

Colocado sin empujar.


Don't introduce completely the fitting. No introducir al completo el émbolo.

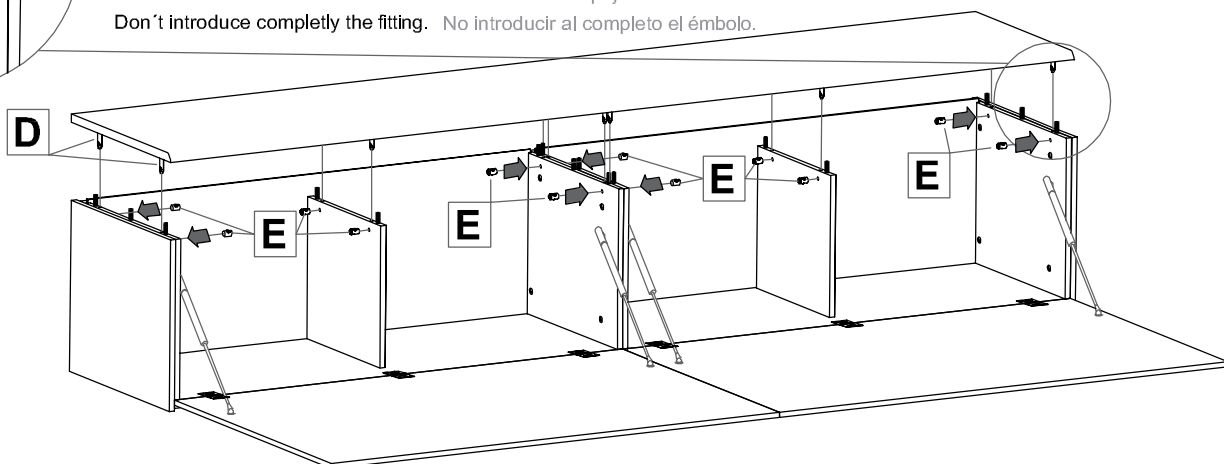


3 SCREW. ATORNILLAR.

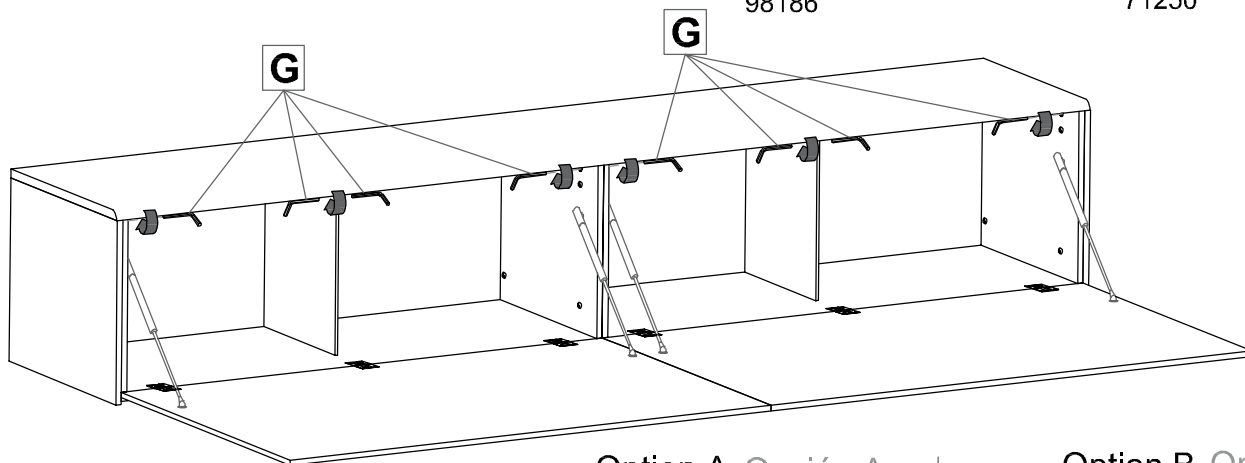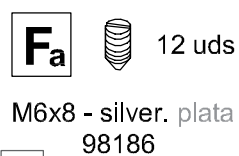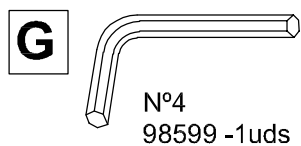


Option A Opción A

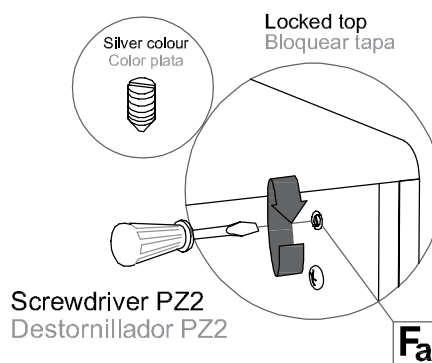



Option B Opción B

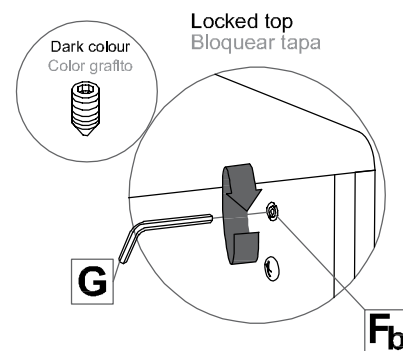

4 TURN IT CAREFULLY AND PLACE IT ON A SOFT SURFACE. GIRAR CON CUIDADO Y PONERLO SOBRE UNA SUPERFICIE BLANDA.

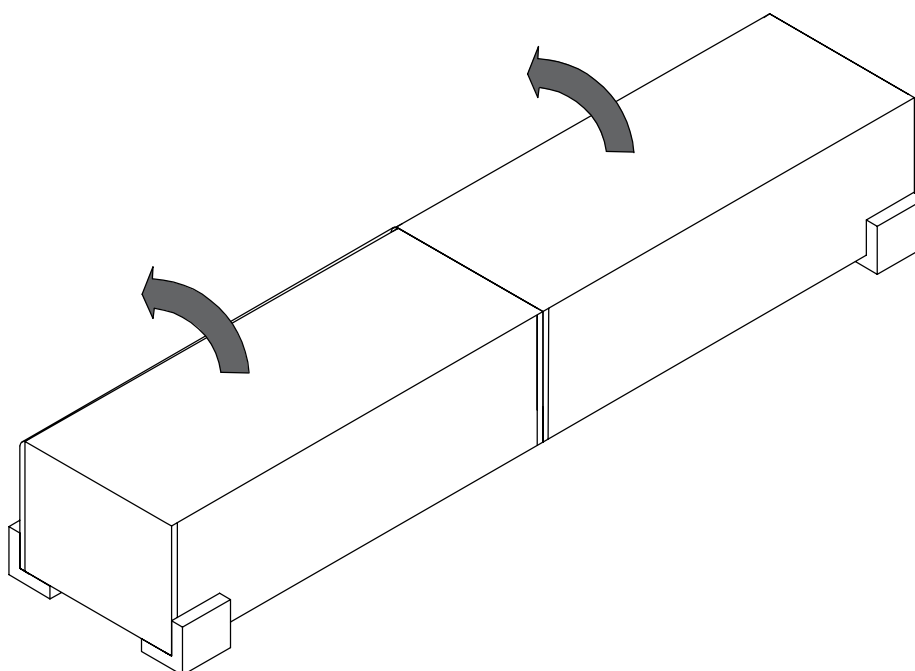

5 CENTERING AND SCREWING. CENTRAR Y ATORNILLAR.

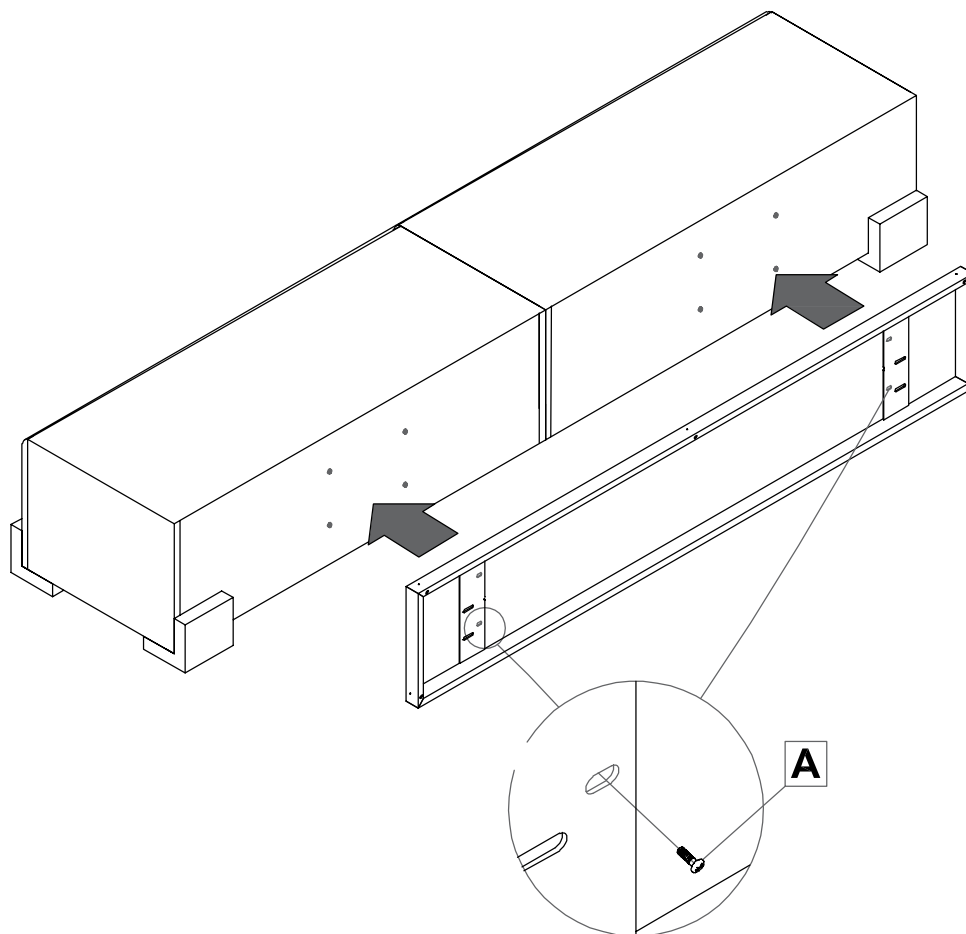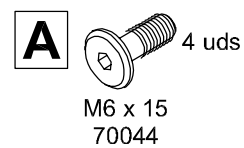

6 REGULATION. REGULACIÓN.

